

Addendum to Pure Brake Fluid Exchanger Operator Manual PART# 98119 READ THIS BEFORE READING MANUAL

Dear Customer,

Our standard Brake Flush Machines require that a code from the brake fluid bottle be inserted each time a service is performed. **YOUR MODEL DOES NOT REQUIRE THESE CODES; IT IS A NON ACCESS CODE MODEL.**

Please ignore references in the Operation Manual to when and how to enter the codes, time out after entering code and lockout after repeated incorrect code entries. Most of these references are on page 5 of the manual, which you should skip.

All other instructions on the Operation Manual apply to your machine.

Thank you for your attention

ACEL, LLC

Questions? Comments? Ph: 954-999-4602; email: bpicardi@acelusa.com

12/15/2013